

MAG MANN LED Troffer Retrofit Kit Installation Instructions

1. Remove the original fluorescent tube



2. Remove the ballast.




3. Remove other irrelevant parts of the troffer



4. Connect the output line of driver and power line



5. Connect input line of driver and kit's line

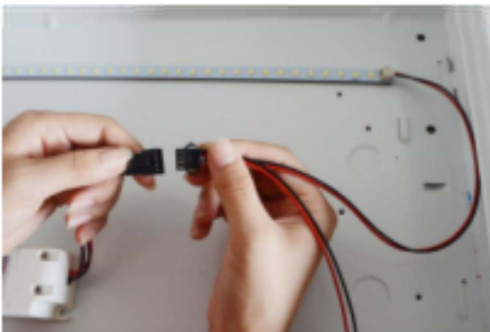

6. Fasten the magnetic strip and driver in the troffer



7. Close the cover of the driver



8. Close the cover of the troffer

